

Installation




CONTENTS

1. CORNER MOUNT BRACKET	1 EA	3. M10 x 45 BOLT & NUT & WASHER SET	4 EA
2. SET ANCHOR BOLT (W5/6)	8 EA	4. MANUAL	1 EA

A. Install on a wall bracket kits

- A-1. First mark the positions of holes placing the Corner Mount Bracket. (FIG. 1)
 - A-2. Make $\varnothing 13\text{mm}$ 8 holes by drill. (Depth 37mm)
 - A-3. Install SET ANCHOR BOLT on the holes.
 - A-4. Fix the wanted Wall Mount Kits on the Corner Mount Bracket with 4 EA of M10 Bolt before you install the Corner Mount Bracket. (FIG. 2)
- Screw the SET ANCHOR BOLT of the bracket by nut on the wall.


* Wall Mount Bracket use an inside hole of Pole Mount. (136 x 215.6)

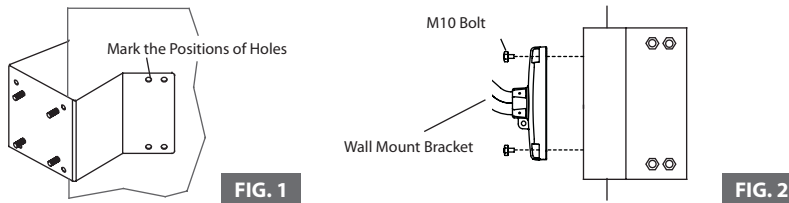


B. Install on a junction box

- B-1. First mark the positions of holes placing the Corner Mount Bracket. (FIG. 1)
 - B-2. Make $\varnothing 13\text{mm}$ 8 holes by drill. (Depth 37mm)
 - B-3. Install SET ANCHOR BOLT on the holes.
 - B-4. Fix the wanted Junction Box on the Corner Mount Bracket with 4 EA of M10 Bolt before you install the Corner Mount Bracket. (FIG. 3)
- Screw the SET ANCHOR BOLT of the bracket by nut on the wall.

* Junction Box use an outside hole of Pole Mount. (186.8 x 256.8)

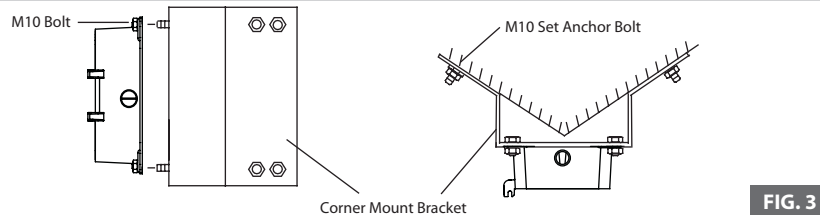

Installation

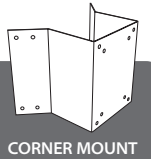


CONTENTS

1. CORNER MOUNT BRACKET	1 EA	3. M10 x 45 BOLT & NUT & WASHER SET	4 EA
2. SET ANCHOR BOLT (W5/6)	8 EA	4. MANUAL	1 EA

A. Install on a wall bracket kits

- A-1. First mark the positions of holes placing the Corner Mount Bracket. (FIG. 1)
 - A-2. Make $\varnothing 13\text{mm}$ 8 holes by drill. (Depth 37mm)
 - A-3. Install SET ANCHOR BOLT on the holes.
 - A-4. Fix the wanted Wall Mount Kits on the Corner Mount Bracket with 4 EA of M10 Bolt before you install the Corner Mount Bracket. (FIG. 2)
- Screw the SET ANCHOR BOLT of the bracket by nut on the wall.

* Wall Mount Bracket use an inside hole of Pole Mount. (136 x 215.6)

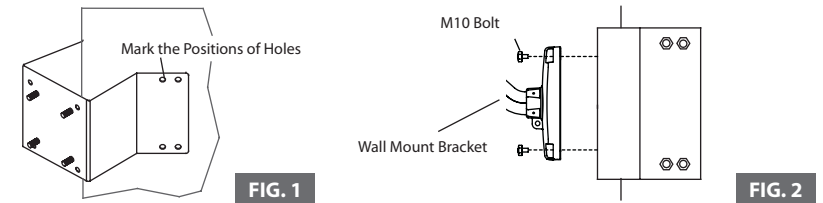

B. Install on a junction box

- B-1. First mark the positions of holes placing the Corner Mount Bracket. (FIG. 1)
 - B-2. Make $\varnothing 13\text{mm}$ 8 holes by drill. (Depth 37mm)
 - B-3. Install SET ANCHOR BOLT on the holes.
 - B-4. Fix the wanted Junction Box on the Corner Mount Bracket with 4 EA of M10 Bolt before you install the Corner Mount Bracket. (FIG. 3)
- Screw the SET ANCHOR BOLT of the bracket by nut on the wall.

* Junction Box use an outside hole of Pole Mount. (186.8 x 256.8)

