




# Installation

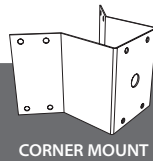

## CONTENTS


1. CORNER MOUNT BRACKET	1 EA	3. M10 x 45 BOLT & NUT & WASHER SET	4 EA
2. SET ANCHOR BOLT (W5/16)	8 EA	4. MANUAL	1 EA

1. First mark the positions of holes placing the corner mount bracket.
2. Make  $\varnothing 13\text{mm}$  8 holes by drill. (Depth 37mm)
3. Install SET ANCHOR BOLT on the holes.
4. Fix the wanted bracket on the corner mount bracket with 4 ea of M10 BOLT before you install the corner mount bracket. (FIG.2)
5. Screw the set anchor bolt of the bracket by nut on the wall. (FIG.3)

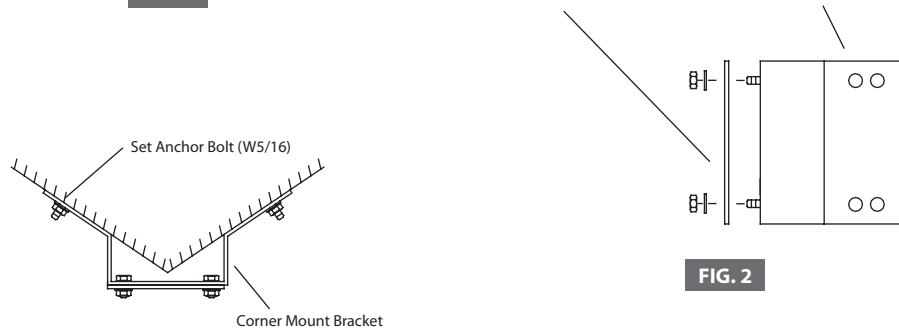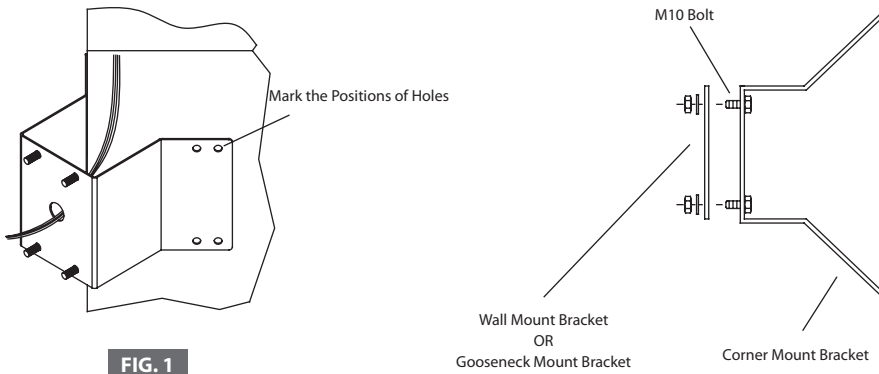

**FIG. 3**



# Installation

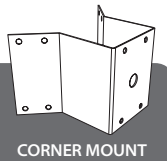

## CONTENTS

1. CORNER MOUNT BRACKET	1 EA	3. M10 x 45 BOLT & NUT & WASHER SET	4 EA
2. SET ANCHOR BOLT (W5/16)	8 EA	4. MANUAL	1 EA

1. First mark the positions of holes placing the corner mount bracket.
2. Make  $\varnothing 13\text{mm}$  8 holes by drill. (Depth 37mm)
3. Install SET ANCHOR BOLT on the holes.
4. Fix the wanted bracket on the corner mount bracket with 4 ea of M10 BOLT before you install the corner mount bracket. (FIG.2)
5. Screw the set anchor bolt of the bracket by nut on the wall. (FIG.3)

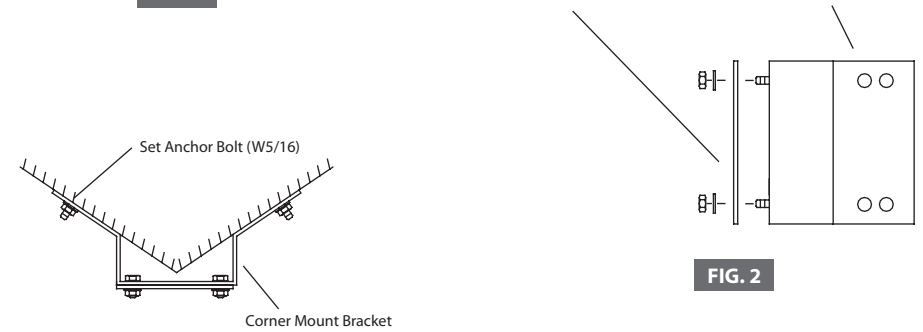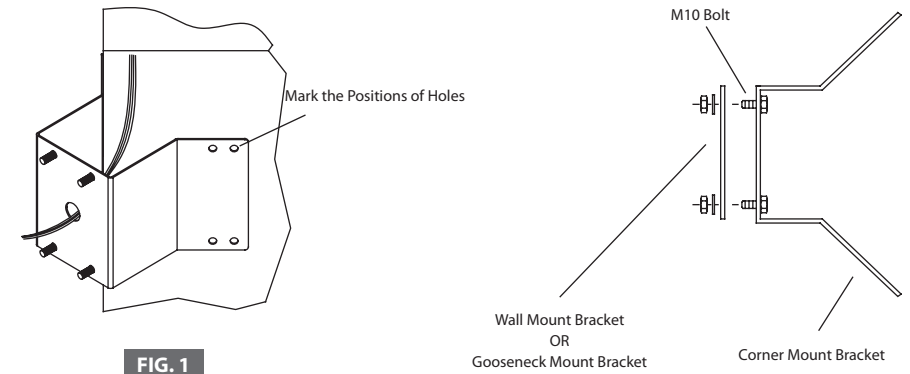

**FIG. 3**